# Dishwashers

**1** Electrolux

# EWDW6505G S, EWDW6505G W, EWDW6505G B

## **Featuring Wave-Touch™ Electronic Controls**





#### **Wave-Touch™ Controls**

Features fully integrated Wave-Touch™ controls. One simple touch and the control panel activates. Includes 9 wash cycles and 5 dishcare options to make it a most versatile dishwasher.



#### Quietest in its Class\*

So quiet you can run it whenever you want and no one will notice. Tested to 45 dBA sound level.



#### Sure-2-Fit™ Racking System

The most versatile dishware racking system — there's a perfect place for over 180 items, from chopsticks to stockpots to stemware. There's also an adjustable/removable top rack for the utmost flexibility.



## Largest Usable Capacity

Largest usable capacity\*\* in its class so all of your dinner party dishware fits.


Star-K® Approved for Storage	Yes
	100
Features	Van
Stainless Steel Interior Signature Soft-Arc Door and Handle Design	Yes Yes
Luxury-Hold™ Door	Yes
Wave-Touch™ Electronic Controls	Yes
Fully Integrated Control Panel	Yes
Fall Tub Design	Yes
Smart Soil Sensor™	Yes
_uxury-Quiet™ Sound Package	Yes
Vash Levels	5
AquaLux™ Wash System	Yes
_uxury-Dry™ Power Dry System	Yes
Adjustable Rinse Aid Dispenser with Indicator	Yes
Cycles	
Auto Wash	Yes
Heavy	Yes
Normal	Yes
avorite	Yes
Quick	Yes
Delicate	Yes
Eco Wash	Yes
Perfect Stemware <sup>™</sup>	Yes
Rinse Only	Yes
Options	
	Yes
Hi-Temp. Wash Hi/Low Pressure	Yes
Air Dry	Yes
NSF® Certified Sanitize Option	Yes
Delay Start (Hours)	30 min. – 24 hrs.
	00 Hills. 24 Hills.
Rack System	
Sure-2-Fit™ Nylon Rack System	Yes
_uxury-Glide™ Nylon Upper Rack –	
Adjustable Height	Yes
Cup Shelf/Stemware Holder	2/Yes
Cup Clips	4
Perfect Stemware™ Holder	Yes 4 Rows
Fold-Down Tines	4 Rows
Rack Handle  Versa-Tray™	Yes Yes
	res
_uxury-Glide™ Nylon Lower Rack – Fold-Down Tines	6 Rows
Rack Handle	Yes
Knife Holder	Yes
Utility Tray/Shelf	Yes
Stemware/Champagne Glass Holders	4
Silverware Basket	3-Piece Split
Special Items Cover/Mesh Basket	Yes
	.00
Specifications	
Overall Exterior Dimensions –	
Height (Adjustable)	33-7/8" – 34-7/8"
Width	23-3/4"
Depth (to Center of Arc) (with 90° Door Open)	24-5/8" 49-7/8"
Power Supply/Water Inlet Location	Middle Bottom Rea
eveling Legs	Yes
Vater Useage (Gallons) – Normal Cycle	4.9 – 8.5
Vater Pressure (PSI)	15 – 120
/oltage Rating	120V/60Hz/15A
	1.44
Connected Load (kW Rating) @ 120 Volts <sup>‡</sup>	9
Connected Load (kW Rating) @ 120 Volts <sup>‡</sup> Amps @ 120 Volts	
Amps @ 120 Volts	
	98 Lbs. 115 Lbs.

24" BUILT-IN DISHWASHERS



<sup>\*</sup>Based on published MSRP and specifications.

<sup>\*\*</sup>As measured by adjusted rack space

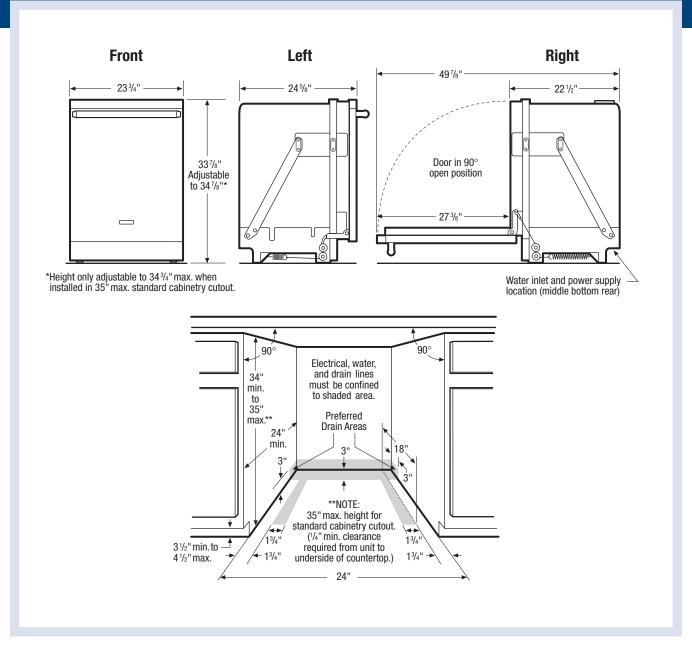

# **Built-In Dishwasher Specifications**

- Product Weight 98 Lbs.
- Voltage Rating -120V/60Hz/15 Amps
- Connected Load (kW Rating) @ 120 Volts = 1.44kW
  (For use on adequately wired 120V, dedicated circuit having 2-wire service with a separate ground wire. Appliance must be grounded for safe operation.)
- Amps @ 120V = 9 Amps
- Always consult local and/or national electric & plumbing codes.
- Water Pressure Hot water line to dishwasher must provide between 15 and 120 pounds per square inch (psi).
- Make sure location has right drain, water and electrical outlets to make connections.
- Keep back free of drain, water & electrical supply.
- Electrical and water supplies should enter cabinet opening on floor, or through back or side walls, as shown in shaded areas.

USA • 250 Bobby Jones Expressway • Augusta, GA 30907 • 1-877-4electrolux (1-877-435-3287) • electroluxappliances.com

CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • electroluxappliances.ca

- Connections preferably located toward left side of dishwasher. Do not cross drain, water or electrical lines in front of motor, blower or frame.
- Minimum clearance of 1/4" required from unit to underside of countertop.
- Leveling legs supplied to adjust height. (Note: Height only adjustable to 34-3/4" max. when installed in 35" max. standard cabinetry cutout to allow for 1/4" min. clearance.)
- When installing in corner, allow 2" clearance between opened door and wall, to allow door to open.
- When installing at end of cabinet line, sides must be fully enclosed.
- Do not install unit under a cooktop, damage may occur.

Note: For planning purposes only. Refer to Product Installation Guide on the web at electroluxappliances.com for detailed instructions.





